

# Pumps, Pumping Systems and Ancillaries

## NEWTON TAS250

### Ground & Surface Water Pump

Rev 1.0 - 01 June 2023

PRODUCT CODE - TAS250

#### INTRODUCTION

Congratulations on your purchase of this pump product. All Newton pump products are developed with the help of the latest technologies and manufactured with the most advanced electrical/motor parts.

Please check the following points upon receipt of your pump:

1. The pump is the model that you ordered?
2. Has any damage been caused during delivery?
3. Are the pipe/valve ancillary parts you asked for included as requested?

**IMPORTANT** - This manual has been produced for the specific use of the Newton TAS250 pump and should be the main reference document for the installation and safe use of the pumps. Please also familiarise yourself with the manual included in the packaging. With manual versions of the pumps, it is imperative that the installation manual of the control panel or pump controller is read in conjunction with this manual.

#### SPECIFICATIONS

Model	Output	Discharge	Rated		Maximum		Dimension	Weight
	(W)	BSP	Head (M)	Flow (LPM)	Head (M)	Flow (LPM)	LxWxH (mm)	kg
TAS250	250	1 1/2"	4	220	7.5	270	190x140x360	11

Check the nameplate for your pump's specification as the table above. Be careful not to exceed the given specifications in the use of your pump.

#### LIMITATIONS

The Newton TAS250 series pumps are suitable to pump clean and dirty water with suspended soft solids of a maximum of 5mm. Newton TAS250 Pump can be used for both permanent and temporary installation. They are not suitable for the pumping of effluent or sewage. Do not let the pump run dry. The pump cannot be used for sea water and inflammable, corrosive, explosive or dangerous liquids.




**DANGER:** Keep the equipment out of the reach of children

**DANGER:** Failure to follow the directions given could cause serious risk to individuals or property



**WARNING:** Failure to follow an instruction may damage the pump and/or the system

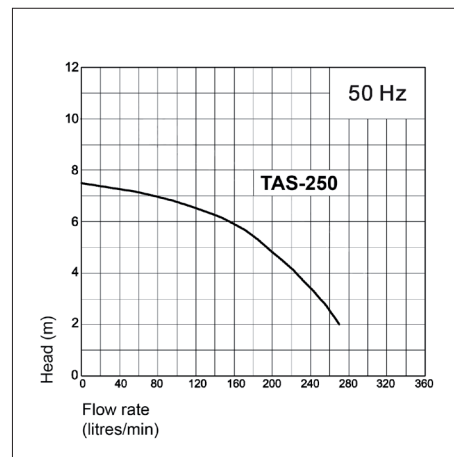

# NEWTON TAS250

## Ground & Surface Water Pump

### INSTALLATION

- Do not work on pump until power is unplugged
- Do not cut off ground pin or use an adapter fitting
- Do not use an extension cord
- Before installing or servicing this pump, be certain pump power source is disconnected
- Installation and electrical wiring must be carried out by trained and qualified personnel
- Pump must be correctly earthed

### INSTALLATION - IMPORTANT

- Pump(s) must receive power directly from a fused switched spur that is in line of sight of the pumping station. Do not connect the pump to extension cables
- If possible, each pump should have its own connection to the consumer board and be protected by a 30 mA RCD
- Use the correct size fuse for the pump as confirmed on page 3

### INSTALLATION

- Do not work on pump until power is unplugged
- Do not cut off ground pin or use an adapter fitting
- Do not use an extension cord
- Before installing or servicing this pump, be certain pump power source is disconnected
- Installation and electrical wiring must be carried out by trained and qualified personnel
- Pump must be correctly earthed
- Voltage of power supply must match the voltage of the pump
- Before installing pump, clear sump basin of any water, debris or sediment

### The following may cause severe damage to pump and will void warranty:

- Using extended wiring not suitable for the pump motor size and the distance of the extended cable
- Not having the pump correctly grounded to earth
- Working on the pump without it being disconnected
- Running the pump continuously
- Pumping chemicals or corrosive liquids
- Pumping gasoline or other flammable liquids
- Do not use the pump if it is damaged

### Overload protection:

Newton TAS250 includes built in thermal protection switch. The pump stops if an overload condition occurs. The motor restarts automatically after it has cooled down.

### Electric Supply:

The Newton TAS250 requires a single phase 230V AC power supply. It is advisable that all pumps are connected to their own individual power supply directly from the consumer board so that each of the pumps does not share a consumer board supply with the other pump or with any other electrical circuit or device. In reality, this is normally only achievable with new build properties or where fundamental refurbishment of the whole property or the electrical supply is to be undertaken. Where it is not planned or possible to have each pump connected to a separate supply from the consumer board, it is preferable that each pump is supplied from a separate circuit. If this is not possible, each pump should be connected to a separate fused and switched spur or socket. Each separate circuit should have its own RCD protection as required by the 17th Edition Wiring Regulations. The RCD should be correctly sized at 30mA so as not to trip during normal pump start or pump run parameters.

It is preferable for the pumps to be wired to the rear of a switched spur. The spur should be switched and have a neon light confirming the 'ON' position. Pumps may be plugged into wall sockets and again these should be switched and have neon light notification of the 'ON' position. It is recommended that the spur or socket have a label confirming that the switch must not be switched off unless in an emergency.

The spur or socket should be located in direct eye sight line of the sump and to the wall closest to the sump so that in an emergency it is obvious which switch(es) will turn off the pumps.

### SUPPLIED FITTINGS

Newton TAS250 is supplied ready to receive pressure rated pipe, the recommended pipe for pumps. The data sheet confirms the supplied pipe and valve options. The correct pipe, valves and pipe fittings should be ordered prior to installation.

Fit the pump into the sump chamber with correctly sized and cut pipework and pipe fittings, ensuring that the pipe build includes a means of removal of the pumps for servicing and repair.



### ELECTRICAL PRECAUTIONS

Before servicing a pump, always shut off the main power breaker and then unplug the pump.

Make sure you are not standing in water and are wearing insulated protective sole shoes.

Connection or disconnection of the pump from the electrical supply should be by trained & qualified persons only.

TROUBLESHOOTING - DISCONNECT PUMP FROM MAINS & CONVERTER POWER SUPPLY

# NEWTON TAS250

## Ground & Surface Water Pump

PROBLEM	POSSIBLE CAUSES
Pump motor hums but no water is being pumped	<p>Impeller may be clogged. Free impeller from debris.</p> <p>The check valve may have been installed in the wrong direction. Ensure arrow on valve is pointing in direction of flow.</p> <p>Discharge shut-off valve (if used) may be closed.</p> <p>Pump could be air-locked. Start and stop several times by raising and lowering the switch.</p> <p>Check for clogged vent hole in pump case.</p> <p>Float may be set too low – pump has removed as much water as it can but cannot switch off. Raise float so that the pump turns off before pumping out all the water it can.</p> <p>* If all of the above are OK, and then the motor winding could be damaged.</p>
Pump runs and pumps out sump but does not stop	<p>Switch may be caught and so unable to reach the 'OFF' position. Make sure switch is unhindered in its operation.</p> <p>Possible defective vertical switch. Speak with Newton Waterproofing Systems with a view to replacing with vertical switch.</p> <p>Float may be set too low – pump has removed as much water as it can but cannot switch off. Raise float so that the pump turns off before pumping out all the water it can.</p>
Pumps runs but delivers only a small amount of water	<p>Pump could be air-locked. Start and stop several times by raising and lowering the switch.</p> <p>Check for clogged vent hole in pump case.</p> <p>Float may be set with a too narrow band between 'ON' &amp; 'OFF'. Reset float so that the pump turns on and off to remove the optimal volume of water.</p> <p>Inlet holes in pump base are clogged. Clean the inlets of debris.</p> <p>Impeller or volute openings maybe fully or partially clogged. Remove pump and clean the openings.</p> <p>Pump impeller could be partially clogged with matter, causing motor to run slow and overload. Remove pump and clean.</p>
Fuse blows or circuit breaker trips when pump starts	<p>Pump impeller or impeller housing may be partially clogged with foreign matter, causing motor to run slow and overload. Remove pump and clean.</p> <p>Motor starter may be defective.</p> <p>Fuse size may be too small. 5 amps should be used.</p> <p>Circuit breaker could be too sensitive. Use 30mA breaker.</p>
Motor runs for a short time, then stops	<p>Inlet openings in pump base may be clogged. Remove pump and clean the openings.</p> <p>Pump impeller may be partially clogged with foreign matter, causing motor to run slow and overload. Remove pump and clean.</p> <p>Motor starter may be defective.</p> <p>Impeller may be fully or partially clogged. Remove pump and clean.</p>

### LIMITED WARRANTY

Newton Waterproofing Systems will repair with new parts or replace the Newton TAS 250 pump if proven to be defective due to materials or workmanship.

Newton Waterproofing Systems shall possess the sole right to determine whether to repair or replace defective equipment, parts or components.

**PUMPS:** Newton TAS250 is supplied with a 1-year manufacturers warranty from the proven date of installation or the date of purchase if this cannot be verified. A 3-year warranty is available if the pumps are serviced at intervals agreed by a Newton approved service engineer. In all cases, the warranty is 'back-to-base'. Newton Waterproofing Systems have a returns policy and any issues regarding pumps under warranty should in the first instance be referred to our Head Office by contacting 01732 360 095. Please see our Terms & Conditions of Sale for further information.

**LABOUR & COSTS:** Newton Waterproofing Systems shall in no event be liable for the cost of field labour or other charges incurred by the customer in removing and/or re-affixing any Newton pump product, parts or components.

### THE WARRANTY WILL NOT APPLY:

- to defects or malfunctions resulting from failure to correctly install, operate, or maintain the pump in accordance with printed instructions provided
- to failures resulting from abuse, accident or negligence
- to normal maintenance services and the parts used in connection with such service
- to units which are not installed in accordance with applicable local codes, ordinances and good trade practices
- if the unit is used for purposes other than for what it was designed and manufactured for

### GUARANTEE

The right to claim under guarantee must be proven by the purchaser by presentation of the purchase invoice. Note:

- Should your equipment not function correctly, please firstly check whether this is due to other reasons, e.g. interruption of the power supply or incorrect handling are the cause.
- Please do not return goods to Newton Waterproofing Systems unless accompanied by proof of purchase and a Newton Returns Form. The form should be correctly and fully completed.

Newton Waterproofing Systems reserve the right to update product literature at any time. Please always refer to our [website](#) for the latest versions.

## Declaration of Conformity - UK

### Tsurumi Pumps UK Ltd.

Obart House, Liphook Way, Maidstone, Kent, ME16 0FZ

#### We declare that the machinery described:

Name: submersible pump

Series model:

TAS250, TAS250(A)

#### Complies with the following statutory requirements:

Machinery (Safety) Regulations 2008 as amended  
Electrical Equipment (Safety) Regulations 2016 as amended  
Electromagnetic Compatibility Regulations 2016 as amended

#### Referring to the following designated standards:

- BS EN ISO 12100: 2010 / Safety of Machinery - General principles for design / Risk Assessment and Risk reduction.
- BS EN 60204-1:2018 / Safety of machinery - Electrical equipment of machines - Part 1: General requirements
- BS EN 809:1998+A1:2009/AC:2010 / Pumps and pump units for liquids - Common safety requirements
- BS EN 12162:2001+A1:2009 / Liquid pumps - Safety requirements - Procedure for hydrostatic testing
- BS EN IEC 61000-6-2: 2019 / Electromagnetic compatibility (EMC)- Part 6-2: Generic standards – Immunity for industrial environments
- BS EN 61000-6-4:2007/A1:2011 / Electromagnetic compatibility (EMC)- Part 6-4: Generic standards – Emission standard for industrial environments

Date of issue: 01/06/2023

Authorised signature:

Matthew Hill  
Managing Director

## Declaration of Conformity - EU

### Tsurumi Pumps UK Ltd.

Obart House, Liphook Way, Maidstone, Kent, ME16 0FZ

#### We declare that the machinery described:

Name: submersible pump

Series model:

TAS250, TAS250(A)

#### Complies with the following statutory requirements:

Machinery Directive 2006/42/EC  
Electromagnetic Compatibility Directive 2014/30/EU  
Low Voltage Equipment Directive 2014/35/EU  
Restriction of Hazardous substances 2011/65/EU

#### The following standards have been applied to the product(s):

- EN ISO 12100: 2010 / Safety of Machinery - General principles for design / Risk Assessment and Risk reduction.
- EN 60204-1:2018 / Safety of machinery - Electrical equipment of machines. General requirements
- EN 809:1998+A1:2009/AC:2010 / Pumps and pump units for liquids - Common safety requirements
- EN 12162:2001+A1:2009 / Liquid pumps - Safety requirements - Procedure for hydrostatic testing
- EN 61000-6-2: 2005 / Electromagnetic compatibility (EMC)- Part 6-2: Generic standards – Immunity for industrial environments
- EN 61000-6-4:2007/A1:2011 / Electromagnetic compatibility (EMC)- Part 6-4: Generic standards – Emission standard for industrial environments

Date of issue: 01/06/2023

Authorised signature:

Matthew Hill  
Managing Director